

1/16 - 1/8 - 1/4 DIN PROCESS CONTROLLERS
CONCISE PRODUCT MANUAL (59300-4)



CAUTION: Installation should be only performed by technically competent personnel. Local Regulations regarding electrical installation & safety must be observed.

1. INSTALLATION

The models covered by this manual have three different DIN case sizes (refer to section 10). Some installation details vary between models. These differences have been clearly shown.

Note: The functions described in sections 2 thru 9 are common to all models.




Installing Option Modules

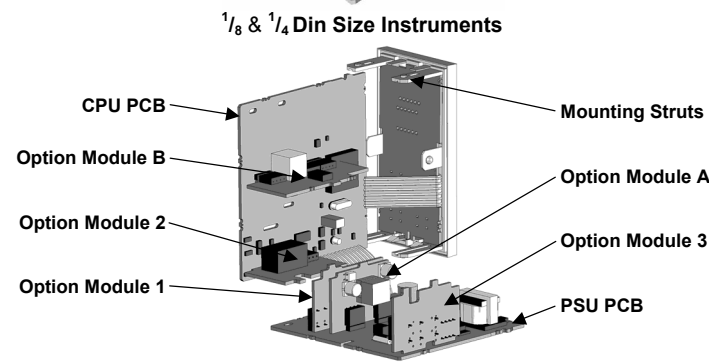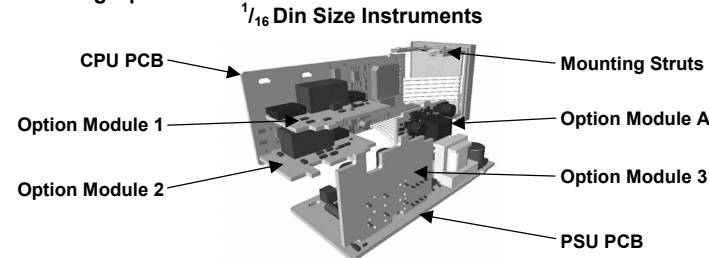

To access modules 1, A or B, first detach the PSU and CPU boards from the front by lifting first the upper, and then lower mounting struts. Gently separate the boards.
 a. Plug the required option modules into the correct connectors, as shown below.
 b. Locate the module tongues in the corresponding slot on the opposite board.
 c. Hold the main boards together while relocating back on the mounting struts.
 d. Replace the instrument by aligning the CPU and PSU boards with their guides in the housing, then slowly push the instrument back into position.

Note: Option modules are automatically detected at power up.

Option Module Connectors

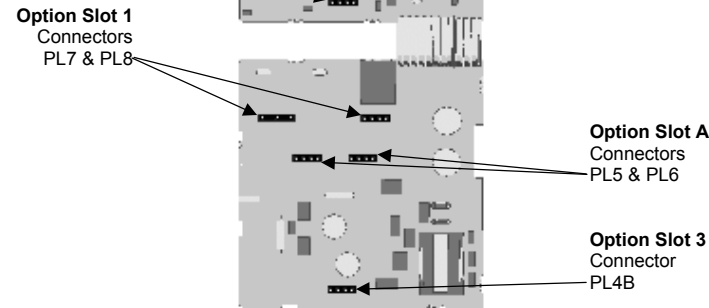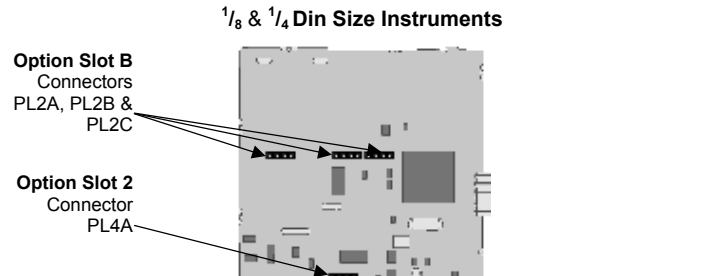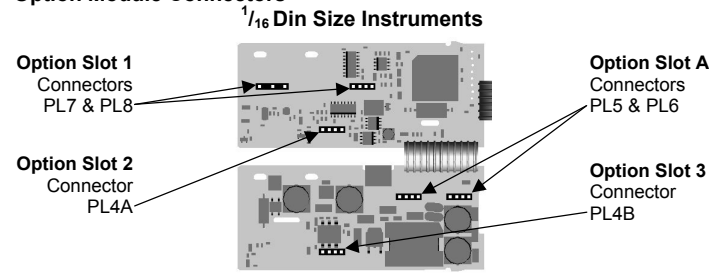


Panel-Mounting

The mounting panel must be rigid, and may be up to 6.0mm (0.25inch) thick. Cut-out sizes are:

1/16 & 1/8 Din = 45mm
1/4 Din = 92mm



For n multiple instruments mounted side-by-side, cut-out A is 48n-4mm (1/16 & 1/8 Din) or 96n-4mm (1/4 Din)

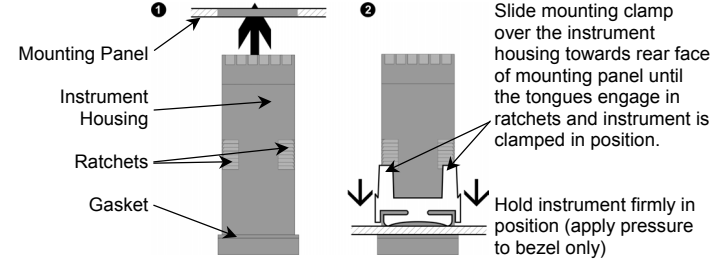

CAUTION: Do not remove the panel gasket; it is a seal against dust and moisture.

Rear Terminal Wiring

USE COPPER CONDUCTORS (EXCEPT FOR T/C INPUT)
Single Strand wire gauge: Max 1.2mm (18SWG)

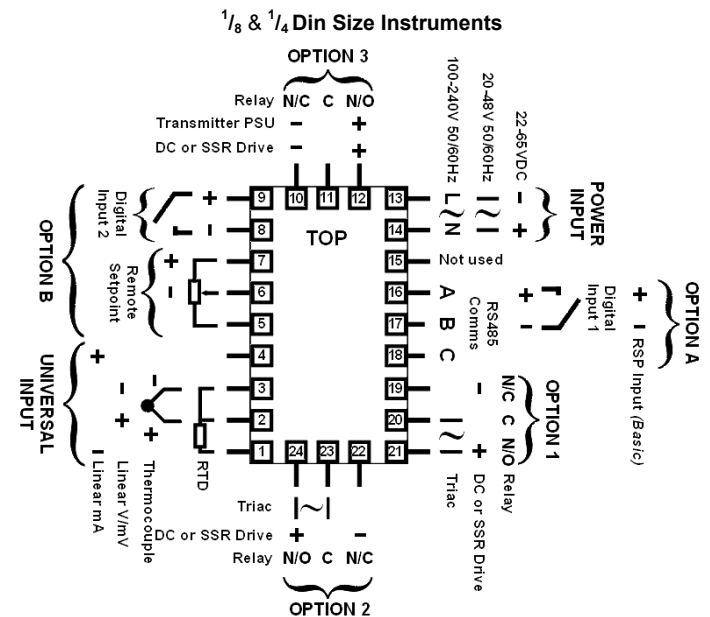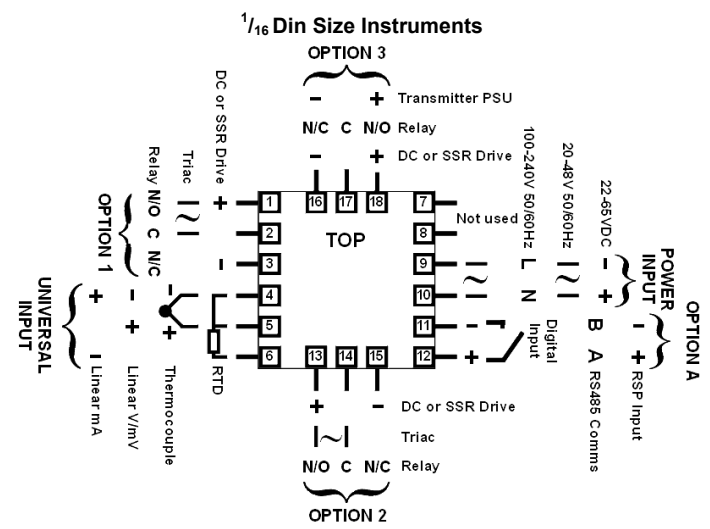

These diagrams show all possible option combinations. The actual connections required depends on the exact model and options fitted.

CAUTION: Check information label on housing for correct operating voltage before connecting supply to Power Input
Fuse: 100 - 240V ac - 1amp anti-surge
24/48V ac/dc - 315mA anti-surge

Note: At first power-up the message `Go to Conf` is displayed, as described in section 7 of this manual. Access to other menus is denied until configuration mode is completed

2. SELECT MODE

Select mode is used to access the configuration and operation menu functions. It can be accessed at any time by holding down `Go` and pressing `Up`. In select mode, press `Up` or `Down` to choose the required mode, press `Go` to enter. An unlock code is required to prevent unauthorised entry to Configuration, & Setup modes. Press `Up` or `Down` to enter the unlock code, then press `Go` to proceed.

Mode	Upper Display	Lower Display	Description	Default Unlock Codes
Operator	OPTr	SLCt	Normal operation	None
Set Up	SEtP	SLCt	Tailor settings to the application	10
Configuration	CONF	SLCt	Configure the instrument for use	20
Product Info	info	SLCt	Check manufacturing information	None
Auto-Tuning	AutoT	SLCt	Invoke Pre-Tune or Self-Tune	0

Note: The instrument will always return automatically to Operator mode if there is no key activity for 2 minutes.

3. CONFIGURATION MODE

First select Configuration mode from Select mode (refer to section 2). Press `Go` to scroll through the parameters, then press `Up` or `Down` to set the required value. Press `Go` to accept the change, otherwise parameter will revert to previous value. To exit from Configuration mode, hold down `Go` and press `Up`, to return to Select mode.

Note: Parameters displayed depends on how instrument has been configured. Refer to user guide (available from your supplier) for further details. Parameters marked * are repeated in Setup Mode.

Parameter	Lower Display	Upper Display	Adjustment range & Description	Default Value	
Input Range/Type	inPt	See following table for possible codes			JC
Code	Input Type & Range	Code	Input Type & Range	Code	Input Type & Range
bC	B: 100 - 1824 °C	LC	L: 0.0 - 537.7 °C	P24F	PtRh20% vs 40%: 32 - 3362 °F
bF	B: 211 - 3315 °F	LF	L: 32.0 - 999.9 °F		
cC	C: 0 - 2320 °C	nC	N: 0 - 1399 °C	PtC	Pt100: -199 - 800 °C
cF	C: 32 - 4208 °F	nF	N: 32 - 2551 °F	PtF	Pt100: -328 - 1472 °F
JC	J: -200 - 1200 °C	rC	R: 0 - 1759 °C	PtC	Pt100: -128.8 - 537.7 °C
JF	J: -328 - 2192 °F	rF	R: 32 - 3198 °F	PtF	Pt100: -199.9 - 999.9 °F
J.C	J: -128.8 - 537.7 °C	S.C	S: 0 - 1762 °C	0.20	0 - 20 mA DC
J.F	J: -199.9 - 999.9 °F	S.F	S: 32 - 3204 °F	4.20	4 - 20 mA DC
K.C	K: -240 - 1373 °C	t.C	T: -240 - 400 °C	0.50	0 - 50 mV DC
K.F	K: -400 - 2503 °F	t.F	T: -400 - 752 °F	10.50	10 - 50 mV DC
K.C	K: -128.8 - 537.7 °C	t.C	T: -128.8 - 400.0 °C	0.5	0 - 5 V DC
K.F	K: -199.9 - 999.9 °F	t.F	T: -199.9 - 752.0 °F	1.5	1 - 5 V DC
LC	L: 0 - 762 °C			0.10	0 - 10 V DC
LF	L: 32 - 1403 °F	P24C	PtRh20% vs. 40%: 0 - 1850 °C	2.10	2 - 10 V DC

Note: Decimal point shown in table indicates temperature resolution of 0.1°

Parameter	Lower Display	Upper Display	Adjustment range & Description	Default Value				
Scale Range Upper Limit	ruL	Scale Range Lower Limit +100 to Range Maximum			Range max (Lin=1000)			
Scale Range Lower Limit	rLL	Range Minimum to Scale Range Upper Limit -100			Range min (Linear=0)			
Decimal point position	dPo5	0=XXXX, 1=XXX.X, 2=XX.XX, 3=X.XXX (non-temperature ranges only)			1			
Control Type	CtYP	SnGL	Primary only		SnGL			
		duAL	Primary & Secondary (e.g. heat & cool)					
Primary Output Control Action	CtrL	rEu	Reverse Acting		rEu			
		dIr	Direct Acting					
Alarm 1Type	ALA1	P_H	Process High Alarm		P_H			
		P_Lo	Process Low Alarm					
		dE	Deviation Alarm					
		bAnd	Band Alarm					
					nonE	No alarm		
High Alarm 1 value*	PhA1	Range Minimum to Range Maximum in display units			Range Max			
Low Alarm 1 value*	PLA1	Range Minimum to Range Maximum in display units			Range Min			
Band Alarm 1 value*	bAL1	1 LSD to span from setpoint in display units			5			
Dev. Alarm 1 value*	dAL1	+/- Span from setpoint in display units			5			
Alarm 1 Hysteresis*	AHY1	1 LSD to full span in display units			1			
Alarm 2 Type*	ALA2	Options as for alarm 1			P_Lo			
High Alarm 2 value*	PhA2	Options as for alarm 1			Range Max			
Low Alarm 2 value*	PLA2	Options as for alarm 1			Range Min			
Band Alarm 2 value*	bAL2	Options as for alarm 1			5			

Parameter	Lower Display	Upper Display	Adjustment range & Description	Default Value	
Dev. Alarm 2 Value*	dAL2	Options as for alarm 1			5
Alarm 2 Hysteresis*	AHY2	Options as for alarm 1			1
Loop Alarm	LAEn	d.sA (disabled) or EnAb (enabled)			d.sA
Loop Alarm Time*	LAEt	1 sec to 99 mins. 59secs			99.59
Alarm Inhibit	Inh	nonE	No alarms Inhibited		nonE
		ALA1	Alarm 1 inhibited		
		ALA2	Alarm 2 inhibited		
		both	Alarm 1 and alarm 2 inhibited		
		Pr	Primary Power		
Output 1 Usage	USE1	SEC	Secondary Power		Pr
		AL_d	Alarm 1, Direct		
		AL_r	Alarm 1, Reverse		
		A2_d	Alarm 2, Direct		
		A2_r	Alarm 2, Reverse		
		LP_d	Loop Alarm, Direct		
		LP_r	Loop Alarm, Reverse		
		OR_d	Logical Alarm 1 OR 2, Direct		
		OR_r	Logical Alarm 1 OR 2, Reverse		
		AND_d	Logical Alarm 1 AND 2, Direct		
AND_r	Logical Alarm 1 AND 2, Reverse				
Linear Output 1 Range	tYP1	0.5	0 to 5 V DC output		0.10
		0.10	0 to 10 V DC output		
		0.20	0 to 20 mA DC output		
		4.20	4 to 20 mA DC output		
Retransmit Output 1 Scale maximum	ro1H	-1999 to 9999 (display value at which output will be maximum)		Range max	
Retransmit Output 1 Scale minimum	ro1L	-1999 to 9999 (display value at which output will be minimum)		Range min	
Output 2 Usage	USE2	As for output 1			Sec or AI2
Linear Output 2 Range	tYP2	As for output 1			0.10
Retransmit Output 2 Scale maximum	ro2H	-1999 to 9999 (display value at which output will be maximum)		Range max	
Retransmit Output 2 Scale minimum	ro2L	-1999 to 9999 (display value at which output will be minimum)		Range min	
Output 3 Usage	USE3	As for output 1			AL_d
Linear Output 3 Range	tYP3	As for output 1			0.10
Retransmit Output 3 Scale maximum	ro3H	-1999 to 9999 (display value at which output will be maximum)		Range max	
Retransmit Output 3 Scale minimum	ro3L	-1999 to 9999 (display value at which output will be minimum)		Range min	
Display Strategy	dSP	1, 2, 3, 4, 5 or 6 (refer to section 8)			1
Serial Communications Protocol	Prot	ASC1	ASCII		77bn
		77bn	Modbus with no parity		
		77bo	Modbus with Even Parity		
Serial Communications Bit Rate	bAud	1.2	1.2 kbps		4.8
		2.4	2.4 kbps		
		4.8	4.8 kbps		
		9.6	9.6 kbps		
Comms Address	Addr	1	1 to 255 (Modbus), 1 to 99 (ASCII)		1
		r_wJ	Read/Write		r_wJ
Comms Write	CoEn	r_0	Read only		r_wJ
Digital Input 1 Usage	dIG1	d.S1	Setpoint 1 / Setpoint 2 select*		d.S1
Digital Input 2 Usage	dIG2	d.A5	Automatic / Manual select		d.r5
		d.S1	Setpoint 1 / Setpoint 2 select*		
		d.A5	Automatic / Manual select		
		d.r5	Remote / Local setpoint select		

Note: d IG2 has priority over d IG1 if both are configured for the same usage. If d IG1 or d IG2 = d S1 the remote setpoint input is disabled.

Continued on next page...

Parameter	Lower Display	Upper Display	Adjustment range & Description	Default Value	
Remote Setpoint Input Range	<i>r</i> SP _{IN}	0_20	0 to 20 mA DC input	0_10	
		4_20	4 to 20 mA DC input		
		0_10	0 to 10 V DC input		
		2_10	2 to 10 V DC input		
		0_5	0 to 5 V DC input		
		1_5	1 to 5 V DC input		
		100	0 to 100mV DC input		Available on full RSP (Slot B) only
		Pot	Potentiometer (2KΩ minimum)		(Slot B) only
RSP Upper Limit	<i>r</i> SP _U		-1999 to 9999	Range max	
RSP Lower Limit	<i>r</i> SP _L		-1999 to 9999	Range min	
RSP Offset	<i>r</i> SP _O	Constrained within Scale Range Upper & Scale Range Lower limits		0	
Configuration Lock Code	CLoc	0 to 9999		20	

4. SETUP MODE

Note: Configuration must be completed before adjusting Setup parameters. First select Setup mode from Select mode (refer to section 2). The MAN LED will light while in Setup mode. Press **☛** to scroll through the parameters, then press **▲** or **▼** to set the required value. To exit from Setup mode, hold down **☛** and press **▲** to return to Select mode. **Note: Parameters displayed depends on how instrument has been configured.**

Parameter	Lower Display	Upper Display	Adjustment Range & Description	Default Value		
Input Filter Time Constant	F_iLt		OFF or 0.5 to 100.0 secs	2.0		
Process Variable Offset	OFFS		±Span of controller	0		
Primary Power	PP_{LU}		Current power levels (read only)	N/A		
Secondary Power	SP_{LU}					
Primary Proportional Band	Pb_P		0.0% (ON/OFF) and 0.5% to 999.9% of input span	10.0		
Secondary Proportional Band	Pb_S					
Automatic Reset (Integral Time)	R_rSt		1 sec to 99 mins 59 secs and OFF	5.00		
Rate (Derivative Time)	rRtE		00 secs to 99 mins 59 secs	1.15		
Overlap/Deadband	OL		-20 to +20% of Primary and Secondary Proportional Band	0		
Manual Reset (Bias)	b_rAS		0% (-100% if dual control) to 100%	25		
Primary ON/OFF Differential	d_rFP		0.1% to 10.0% of input span centered about the setpoint. (Entered as a percentage of span)	0.5		
Secondary ON/OFF Diff.	d_sFS					
Prim. & Sec. ON/OFF Differential	d_rFF					
Setpoint Upper Limit	SP_{UL}		Current Setpoint to Range max	R/max		
Setpoint Lower limit	SP_{LL}		Range min to Current Setpoint	R/min		
Primary Output Power Limit	OP_{UL}		0% to 100% of full power	100		
Output 1 Cycle Time	CL₁		0.5, 1, 2, 4, 8, 16, 32, 64, 128, 256 or 512 secs.	32		
Output 2 Cycle Time	CL₂					
Output 3 Cycle Time	CL₃					
High Alarm 1 value	PH_{AI}		Range Minimum to Range Maximum	R/max		
Low Alarm 1 value	PL_{AI}			R/min		
Deviation Alarm 1 Value	d_rAL₁		±Span from SP in display units	5		
Band Alarm 1 value	b_rAL₁		1 LSD to span from setpoint	5		
Alarm 1 Hysteresis	AH_{Y1}		1 LSD to full span in display units	1		
High Alarm 2 value	PH_{A2}		Range Minimum to Range Maximum	R/max		
Low Alarm 2 value	PL_{A2}			R/min		
Deviation Alarm 2 Value	d_rAL₂		±Span from SP in display units	5		
Band Alarm 2 value	b_rAL₂		1 LSD to span from setpoint	5		
Alarm 2 Hysteresis	AH_{Y2}		1 LSD to full span in display units	1		
Loop Alarm Time	LAL_t		1 LSD to full span in display units	99.59		
Auto Pre-tune	APt		d_rSA (disabled) or En_rAb (enabled)	d_rSA		
Auto/manual Control selection	PaEn					
Setpoint Select shown in Operator Mode	SSEn					
Setpoint ramp adjustment shown in Operator Mode	SP_r					
SP Ramp Rate Value	rP				1 to 9999 units/hour or Off (blank)	Off
Setpoint Value	SP				Scale range upper to lower limits. (when dual or remote setpoint options are used, SP is replaced by SP ₁ & SP ₂ or LSP or SP₁ or SP₂ before the legend indicates the currently active SP)	Scale Range Minimum
Local Setpoint Value	_LSP					
Setpoint 1 Value	_SP₁					
Setpoint 2 Value	_SP₂					
Setup Lock Code	SLoc		0 to 9999	10		

5. AUTOMATIC TUNING MODE

First select Automatic tuning mode from Select mode (refer to section 2). Press **☛** to scroll through the modes, then press **▲** or **▼** to set the required value. To exit from Automatic tuning mode, hold down **☛** and press **▲**, to return to Select mode. Pre-tune is a single-shot routine and is thus self-disengaging when complete. If **APt** in Setup mode = **En_rAb**, Pre-tune will attempt to run at every power up*. Refer to the full user guide (available from your supplier) for details on controller tuning.

Parameter	Lower Display	Upper Display	Default Value
Pre-Tune	Ptun	On or OFF . Indication remains OFF if automatic tuning cannot be used at this time*	OFF
Self-Tune	Stun		
Tune Lock	tLoc	0 to 9999	0

* **Note: Automatic tuning will not engage if either proportional band = 0. Also, Pre-tune will not engage if setpoint is ramping, or the PV is less than 5% of input span from the setpoint.**

6. PRODUCT INFORMATION MODE

First select Product information mode from Select mode (refer to section 2). Press **☛** to view each parameter. To exit from Product Information mode, hold down **☛** and press **▲** to return to Select mode. **Note: These parameters are all read only.**

Parameter	Lower Display	Upper Display	Description
Input type	In₁	Un_i	Universal input
Option 1 module type fitted	OP_n1	nonE	No option fitted
		rLY	Relay output
		S5r	SSR drive output
		t_r	Triac output
Option 2 module type fitted	OP_n2	L_{in}	Linear DC voltage / current output
			As Option 1
Option 3 module type fitted	OP_n3	nonE	No option fitted
		rLY	Relay output
		S5r	SSR drive output
		L_{in}	Linear DC voltage / current output
Auxiliary Option A module type fitted	OP_nA	dc24	Transmitter power supply
		nonE	No option fitted
		r485	RS485 communications
		d_iu_i	Digital Input*
Auxiliary Option B module type fitted	OP_nB	rSP₁	Remote Setpoint Input (basic)*
		nonE	No option fitted
		rSP₁	Remote Setpoint Input (full) and Digital Input 2*
Firmware type	FLUJ		Value displayed is firmware type number
Firmware issue	ISS		Value displayed is firmware issue number
Product Revision Level	PR_L		Value displayed is Product Revision level
Date of manufacture	d₀r₁		Manufacturing date code (mmyy)
Serial number 1	S_n1		First four digits of serial number
Serial number 2	S_n2		Middle four digits of serial number
Serial number 3	S_n3		Last four digits of serial number

7. MESSAGES & ERROR INDICATIONS

These messages indicate that an error has occurred or there is a problem with the process variable input signal or its wiring. **Caution: Do not continue with the process until the issue is resolved.**

Parameter	Upper Display	Lower Display	Description
Instrument parameters are in default conditions	Go_{to}	ConF	Configuration & Setup required. This screen is seen at first turn on, or if hardware configuration has been changed. Press ☛ to enter the Configuration Mode, next press ▲ or ▼ to enter the unlock code number, then press ☛ to proceed
Input Over Range	[HH]	Normal	Process variable input > 5% over-range
Input Under Range	[LL]	Normal	Process variable input > 5% under-range
Input Sensor Break	OPEN	Normal	Break detected in process variable input sensor or wiring
RSP Over Range	[HH]**	Normal	RSP input over-range ** also seen wherever RSP value would be displayed
RSP Under Range	[LL]**	Normal	RSP input under-range
RSP Break	OPEN**	Normal	Break detected in RSP input signal
Option 1 Error	Err	OP_n1	Option 1 module fault
Option 2 Error		OP_n2	Option 2 module fault
Option 3 Error		OP_n3	Option 3 module fault
Option A Error		OP_nA	Option A module fault or RSP in both A & B
Option B Error		OP_nB	Option B module fault

8. OPERATOR MODE

This mode is entered at power on, or accessed from Select mode (see section 2). **Note: All Configuration mode and Setup mode parameters must be set as required before starting normal operations.** Press **☛** to scroll through the parameters, then press **▲** or **▼** to set the required value. **Note: All Operator Mode parameters in Display strategy 6 are read only (see d_rSP in configuration mode), they can only be adjusted via Setup mode.**

Upper Display	Lower Display	Display Strategy and When Visible	Description
PV Value	Active SP Value	1 & 2 (initial screen)	PV and target value of selected SP <i>Local Setpoints are adjustable in Strategy 2</i>
PV Value	Actual SP Value	3 & 6 (initial screen)	PV and actual value of selected SP (e.g. ramping SP value). <i>Read only</i>
PV Value	(Blank)	4 (initial screen)	Process variable only <i>Read only</i>
Active SP Value	(Blank)	5 (initial screen)	Target value of selected setpoint only. <i>Read only</i>
SP Value	SP	1, 3, 4, 5 & 6 if digital input is not d_rSI and RSP not fitted	Target value of SP <i>Adjustable except in Strategy 6</i>
SP1 Value	_SP₁	Digital input = d_rSI . lit if active SP = SP1	Target value of SP1 <i>Adjustable except in Strategy 6</i>
SP2 Value	_SP₂	Digital input = d_rSI . lit if active SP = SP2	Target value of SP2 <i>Adjustable except in Strategy 6</i>
Local SP Value	_LSP	RSP fitted. lit or lit if the active SP = LSP	Target value of local setpoint <i>Adjustable except in Strategy 6</i>
Remote SP Value	_rSP	RSP fitted. lit or lit if the active SP = rSP	Target value of remote setpoint <i>Read only</i>
d_ru_i, LSP or rSP	SPS	RSP is fitted, digital input is not d_rSI and SSEn is enabled in Setup mode	Selects local/remote active setpoint LSP = local SP, rSP = remote SP d_ru_i = selection via digital input (if configured). Note: selecting LSP or rSP will override digital input, active SP indication changes to lit <i>Adjustable except in Strategy 6</i>
Actual SP Value	SP_rP	rP is not blank	Actual (ramping) value of selected SP. <i>Read only</i>
Ramp Rate	rP	SP_r enabled in Setup mode	SP ramping rate, in units per hour <i>Adjustable except in Strategy 6</i>
Active Alarm Status	ALSt	When one or more alarms are active. ALM indicator will also flash	L2 Alarm 2 active Alarm 1 active Loop Alarm active

Manual Control

If **PaEn** is set to **En_rAb** in Setup mode, manual control can be selected/de-selected by pressing the **AUTO** key in Operator mode, or by changing the status of a digital input if **d_ru_i** or **d_ru₂** have been configured for **d_rAS** in Configuration mode. While in Manual Control mode, the **MAN** indicator will flash and the lower display will show **P_{xxx}** (where xxx is the current manual power level). Switching to/from manual mode is via Bumpless Transfer. Press **▲** or **▼** to set the required output power. **Caution: Manual power level is not restricted by the OP_{UL} power limit.**

9. SERIAL COMMUNICATIONS

Refer to the full user guide (available from your supplier) for details.

10. SPECIFICATIONS

UNIVERSAL INPUT

Thermocouple: ±0.1% of full range, ±1LSD (±1°C for Thermocouple CJC).
Calibration: BS4937, NBS125 & IEC584.
PT100 Calibration: ±0.1% of full range, ±1LSD.
BS1904 & DIN43760 (0.00385Ω/Ω/°C).

DC Calibration: ±0.1% of full range, ±1LSD.
Sampling Rate: 4 per second.
Impedance: >10MΩ resistive, except DC mA (5Ω) and V (47kΩ).
Sensor Break Detection: Thermocouple, RTD, 4 to 20 mA, 2 to 10V and 1 to 5V ranges only. *Control outputs turn off.*
Isolation: Isolated from all outputs (except SSR driver).
Universal input must not be connected to operator accessible circuits if relay outputs are connected to a hazardous voltage source. Supplementary insulation or input grounding would then be required.

REMOTE SETPOINT INPUT

Accuracy: ±0.25% of input range ±1 LSD.
Sampling Rate: 4 per second.
Sensor Break Detection: 4 to 20 mA, 2 to 10V and 1 to 5V ranges only. *Control outputs turn off if RSP is the active SP.*
Isolation: Slot A - Basic isolation, Slot B - Reinforced safety isolation from other inputs and outputs.

DIGITAL INPUTS

Volt-free(or TTL): Open(2 to 24VDC) = SP1, Local SP or Auto Mode, Closed(<0.8VDC) = SP2, Remote SP or Manual Mode.
Isolation: Reinforced safety isolation from inputs and other outputs.

OUTPUTS

Relay
Contact Type & Rating: Single pole double throw (SPDT); 2A resistive at 120/240VAC.
Lifetime: >500,000 operations at rated voltage/current.
Isolation: Basic Isolation from universal input and SSR outputs.

SSR Driver

Drive Capability: SSR drive voltage >10V into 500Ω min.
Isolation: Not isolated from universal input or other SSR driver outputs.

Triac

Operating Voltage: 20 to 280Vrms (47 to 63Hz).
Current Rating: 0.01 to 1A (full cycle rms on-state @ 25°C); derates linearly above 40°C to 0.5A @ 80°C.
Isolation: Reinforced safety isolation from inputs and other outputs.

DC

Resolution: 8 bits in 250mS (10 bits in 1s typical, >10 bits in >1s typical).
Isolation: Reinforced safety isolation from inputs and other outputs.

Transmitter PSU

Power Rating: 20 to 28V DC (24V nominal) into 910Ω minimum resistance.
Isolation: Reinforced safety isolation from inputs and other outputs.

SERIAL COMMUNICATIONS

Physical: RS485, at 1200, 2400, 4800, 9600 or 19200 bps.
Protocols: Selectable between Modbus and West ASCII.
Isolation: Reinforced safety isolation from all inputs and outputs.

OPERATING CONDITIONS (FOR INDOOR USE)

Ambient: 0°C to 55°C (Operating), -20°C to 80°C (Storage).
Temperature:
Relative Humidity: 20% to 95% non-condensing.
Supply Voltage and Power: 100 to 240VAC ±10%, 50/60Hz, 7.5VA (for mains powered versions), or 20 to 48VAC 50/60Hz 7.5VA or 22 to 65VDC 5W (for low voltage versions).

ENVIRONMENTAL

Standards: CE, UL, ULC.
EMI: Complies with EN61326 (Susceptibility & Emissions).
Safety: Complies with EN61010-1 & UL3121.
Considerations: Pollution Degree 2, Installation Category II.
Front Panel Sealing: To IP66 (IP20 behind the panel).

PHYSICAL

Front Bezel Size: 1/8 Din = 48 x 48mm, 1/8 Din = 96 x 48mm, 1/4 Din = 96 x 96mm.
Depth Behind Panel: 1/16 Din = 110mm, 1/8 & 1/4 Din = 100mm.
Weight: 0.21kg maximum.